Rolling Door Hardware Kits

QUIET GLIDE™

MADE IN USA

Quiet Glide Rolling Door

QUIET GLIDE™ MADE IN USA

Complete Rolling Door Kit

This kit comes with all the parts needed to hang a standard 36" door including a 6' rail, five wall mounting brackets, two roller straps, one center guide, stops.
Choose short or long wall mount brackets. (see Wall Mounting Brackets pg 3)

Hand Forged Kits

Spade & Fleur-de-Lis are hand forged, hammered finish, custom made hardware exclusively for QuietGlide.



Spade
10.5" H
x
3"W

Fleur-de-Lis
11.75"H
x
3.25"W

Part#	Style
QG110007	Bronze Spade w/long brackets
QG110008	Black Spade w/long brackets
QG120007	Bronze Fleur-de-Lis w/long brkts
QG120008	Black Fleur-de-Lis w/long brkts
QG1300BR02	Basic Rectangle Hardware Long Bracket Kit Satin Nickel
QG1300BR07	Basic Rectangle Hardware Long Bracket Kit Oil Rubbed Bronze
QG1300BR08	Basic Rectangle Hardware Long Bracket Kit Black
QG1300C02	Circles Hardware Long Bracket Kit Satin Nickel
QG1300C07	Circles Hardware Long Bracket Kit Oil Rubbed Bronze
QG1300C08	Circles Hardware Long Bracket Kit Black
QG1300C202	Castle 2 Hardware Long Bracket Kit Satin Nickel
QG1300C207	Castle 2 Hardware Long Bracket Kit Oil Rubbed Bronze
QG1300C208	Castle 2 Hardware Long Bracket Kit Black
QG1300CS02	Cube Stick Hardware Long Bracket Kit Satin Nickel
QG1300CS07	Cube Stick Hardware Long Bracket Kit Oil Rubbed Bronze
QG1300CS08	Cube Stick Hardware Long Bracket Kit Black
QG1300DH02	Double Horse Hardware Long Bracket Kit Satin Nickel
QG1300DH07	Double Horse Hardware Long Bracket Kit Oil Rubbed Bronze
QG1300DH08	Double Horse Hardware Long Bracket Kit Black
QG1300GB02	GingerBread Hardware Long Bracket Kit Satin Nickel
QG1300GB07	GingerBread Long Bracket Kit Oil Rubbed Bronze
QG1300GB08	GingerBread Hardware Long Bracket Kit Black
QG1300GB11	GingerBread Hardware Long Bracket Kit Barn Red
QG1300HS02	Horseshoe Hardware Long Bracket Kit Satin Nickel
QG1300HS07	Horseshoe Hardware Long Bracket Kit Oil Rubbed Bronze
QG1300HS08	Horseshoe Hardware Long Bracket Kit Black
QG1300IC02	Ice Cream Cone Hardware Long Bracket Kit Satin Nickel
QG1300IC07	Ice Cream Cone Long Bracket Kit Oil Rubbed Bronze
QG1300IC08	Ice Cream Cone Hardware Long Bracket Kit Black
QG1300IC11	Ice Cream Cone Hardware Long Bracket Kit Barn Red
QG1300NK02	Kaminski Wolf Hardware Long Bracket Kit Satin Nickel
QG1300NK07	Kaminski Wolf Long Bracket Kit Oil Rubbed Bronze
QG1300NK08	Kaminski Wolf Hardware Long Bracket Kit Black
QG1300NR02	Notched Rectangle Hardware Long Bracket Kit Satin Nickel
QG1300NR07	Notched Rectangle Hardware Long Bracket Kit Oil Rubbed Bronze
QG1300NR08	Notched Rectangle Hardware Long Bracket Kit Black
QG1300PL02	Palm-Leis Hardware Long Bracket Kit Satin Nickel
QG1300PL07	Palm-Leis Long Bracket Kit Oil Rubbed Bronze
QG1300PL08	Palm-Leis Hardware Long Bracket Kit Black
QG1300PL11	Palm-Leis Hardware Long Bracket Kit Barn Red
QG1300RS02	Round Stick Hardware Long Bracket Kit Satin Nickel
QG1300RS07	Round Stick Hardware Long Bracket Kit Oil Rubbed Bronze

Contemporary Roller Straps

Triangle
5.36"W x 4.93"H

Circles
2"W x 4.86"

Round Stick
2.75"W x 6.67"H

Castle 2
3"W x 6.5"H

Basic Rectangle
2.62W x 5"H

Cube Stick
2.9"W x 6.8"H

Notched Rectangle
3"W x 6"H

Horseshoe
4.12"W x 6.17"H

Quiet Glide Rolling Door

Vista
2.5"W x 6.25"H

Kaminski Wolf
4.875"W x 8.625"H

Top Mount
4.5"W x 3.5"H

Tri- Star
4.5"W x 5.5"H

Palm-Leis
2.625"W x 8.625"H

Double Horse
4.625"W x 8.625"H

GingerBread
3.625"W x 8.25"H

Wright
2.25"W x 7.625"H

Ice Cream Cone
4.875"W x 8.625"H

Part#	Style
QG1300RS08	Round Stick Hardware Long Bracket Kit Black
QG1300T02	Triangle Hardware Long Bracket Kit Satin Nickel
QG1300T07	Triangle Hardware Long Bracket Kit Oil Rubbed Bronze
QG1300T08	Triangle Hardware Long Bracket Kit Black
QG1300TM02	Top Mount Hardware Long Bracket Kit Satin Nickel
QG1300TM07	Top Mount Long Bracket Kit Oil Rubbed Bronze
QG1300TM08	Top Mount Hardware Long Bracket Kit Black
QG1300TS02	Tri Star Hardware Long Bracket Kit Satin Nickel
QG1300TS07	Tri Star Hardware Long Bracket Kit Oil Rubbed Bronze
QG1300TS08	Tri Star Hardware Long Bracket Kit Black
QG1300V02	Vista Hardware Long Bracket Kit Satin Nickel
QG1300V07	Vista Hardware Long Bracket Kit Bronze
QG1300V08	Vista Hardware Long Bracket Kit Black
QG1300WR02	Wright Hardware Long Bracket Kit Satin Nickel
QG1300WR07	Wright Long Bracket Kit Oil Rubbed Bronze
QG1300WR08	Wright Hardware Long Bracket Kit Black
QG1300WR11	Wright Hardware Long Bracket Kit Barn Red
QG111007	Bronze Spade w/short brackets
QG111008	Black Spade w/short brackets
QG121007	Bronze Fleur-de-Lis w/short brkts
QG121008	Black Fleur-de-Lis w/short brkts
QG1310BR02	Basic Rectangle Hardware Short Bracket Kit Satin Nickel
QG1310BR07	Basic Rectangle Hardware Short Bracket Kit Oil Rubbed Bronze
QG1310BR08	Basic Rectangle Hardware Short Bracket Kit Black
QG1310C02	Circles Hardware Short Bracket Kit Satin Nickel
QG1310C07	Circles Hardware Short Bracket Kit Oil Rubbed Bronze
QG1310C08	Circles Hardware Short Bracket Kit Black
QG1310C202	Castle 2 Hardware Short Bracket Kit Satin Nickel
QG1310C207	Castle 2 Hardware Short Bracket Kit Oil Rubbed Bronze
QG1310C208	Castle 2 Hardware Short Bracket Kit Black
QG1310CS02	Cube Stick Hardware Short Bracket Kit Satin Nickel
QG1310CS07	Cube Stick Hardware Short Bracket Kit Oil Rubbed Bronze
QG1310CS08	Cube Stick Hardware Short Bracket Kit Black
QG1310DH02	Double Horse Hardware Short Bracket Kit Satin Nickel
QG1310DH07	Double Horse Hardware Short Bracket Kit Oil Rubbed Bronze
QG1310DH08	Double Horse Hardware Short Bracket Kit Black
QG1310GB02	GingerBread Hardware Short Bracket Kit Satin Nickel
QG1310GB07	GingerBread Short Bracket Kit Oil Rubbed Bronze
QG1310GB08	GingerBread Hardware Short Bracket Kit Black
QG1310GB11	GingerBread Hardware Short Bracket Kit Barn Red
QG1310HS02	Horseshoe Hardware Short Bracket Kit Satin Nickel
QG1310HS07	Horseshoe Hardware Short Bracket Kit Oil Rubbed Bronze
QG1310HS08	Horseshoe Hardware Short Bracket Kit Black

Part#	Style
QG1310IC02	Ice Cream Cone Hardware Short Bracket Kit Satin Nickel
QG1310IC07	Ice Cream Cone Short Bracket Kit Oil Rubbed Bronze
QG1310IC08	Ice Cream Cone Hardware Short Bracket Kit Black
QG1310IC11	Ice Cream Cone Hardware Short Bracket Kit Barn Red
QG1310NK02	Kaminski Wolf Hardware Short Bracket Kit Satin Nickel
QG1310NK07	Kaminski Wolf Short Bracket Kit Oil Rubbed Bronze
QG1310NK08	Kaminski Wolf Hardware Short Bracket Kit Black
QG1310NR02	Notched Rectangle Hardware Short Bracket Kit Satin Nickel
QG1310NR07	Notched Rectangle Hardware Short Bracket Kit Oil Rubbed Bronze
QG1310NR08	Notched Rectangle Hardware Short Bracket Kit Black
QG1310PL02	Palm-Leis Hardware Short Bracket Kit Satin Nickel
QG1310PL07	Palm-Leis Short Bracket Kit Oil Rubbed Bronze
QG1310PL08	Palm-Leis Hardware Short Bracket Kit Black
QG1310PL11	Palm-Leis Hardware Short Bracket Kit Barn Red
QG1310RS02	Round Stick Hardware Short Bracket Kit Satin Nickel
QG1310RS07	Round Stick Hardware Short Bracket Kit Oil Rubbed Bronze
QG1310RS08	Round Stick Hardware Short Bracket Kit Black
QG1310T02	Triangle Hardware Short Bracket Kit Satin Nickel
QG1310T07	Triangle Hardware Short Bracket Kit Oil Rubbed Bronze
QG1310T08	Triangle Hardware Short Bracket Kit Black
QG1310TM02	Top Mount Hardware Short Bracket Kit Satin Nickel
QG1310TM07	Top Mount Short Bracket Kit Oil Rubbed Bronze
QG1310TM08	Top Mount Hardware Short Bracket Kit Black
QG1300TS02	Tri Star Short Bracket Kit Satin Nickel
QG1300TS07	Tri Star Short Bracket Kit Oil Rubbed Bronze
QG1300TS08	Tri Star Short Bracket Kit Black
QG1310V02	Vista Hardware Short Bracket Kit Satin Nickel
QG1310V07	Vista Hardware Short Bracket Kit Bronze
QG1310V08	Vista Hardware Short Bracket Kit Black
QG1310WR02	Wright Hardware Short Bracket Kit Satin Nickel
QG1310WR07	Wright Short Bracket Kit Oil Rubbed Bronze
QG1310WR08	Wright Hardware Short Bracket Kit Black
QG1310WR11	Wright Hardware Short Bracket Kit Barn Red

Black

Oil Rubbed Bronze

Satin Nickel

Roller Strap Installation

1. Install the roller straps onto the top edge of the door. The location of these straps is critical for the proper, safe use of the rolling door.
2. The distance between the top of the door and the outer diameter of the back of the wheel (measured from the back of the door) should be 13/16" – 7/8" (this will achieve approximately 3/32" gap between the top of the door and the rail when these measurements are achieved).
3. Using the screws provided attach the strap to the door. It is very important that the screws are installed into solid wood, not hollow-core doors with thin veneer skins. It is also recommended that you predrill the screw holes. Make sure that proper vertical alignment of the strap is achieved before fastening the strap to the door.

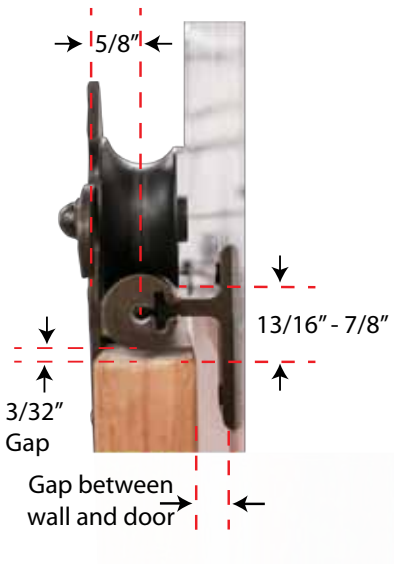

Rail Installation

1. The location of the rail is dependent on the height of the door, desired gap between the floor and bottom of door and desired overlay of top of the door to door opening.
2. Recommended spacing for the wall mounted brackets is 16"
3. The **Short Bracket** will accommodate doors up to 1-1/2" thick,
   the **Long Bracket** will accommodate doors up to 2-1/4" thick.
4. Wall brackets must be mounted securely into the studs behind the sheetrock. If the brackets are to be mounted to the moulding surrounding the opening, the moulding must be firmly secured to the wall framework.

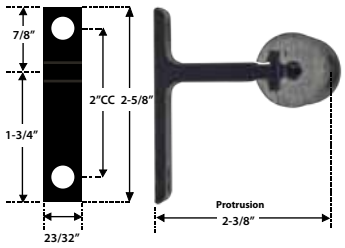

Long Bracket

End Stops and Center Guide (floor mounted & wall mounted)

1. After installing the door onto the rail, slide the door to the desired opened position.
2. Install the End Stop bracket to the floor or wall so that the door stops in the desired opened position.
3. Install the Center Guide bracket so that the door will always be captured by this bracket in the fully opened and fully closed position.
4. Repeat step #2 for installation of the other End Stop bracket when the door is in the closed position.

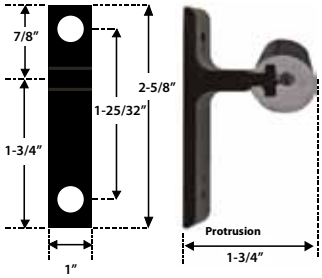

Short Bracket

Dimensional Specifications

Gap between the wall and the door
Using the Short Bracket: Door thickness minus 1-7/8" = gap
Using the Long Bracket: Door Thickness minus 2-1/2" = gap

Door width recommendation: 4" wider than the opening (2" on each side)
Door height recommendation: The height will depend on location of the bracket, but in applications where the brackets are not above the door opening (narrower door openings where the brackets can be on either side of the opening) 1" above the opening would be sufficient.